

Assembly Instructions / Board Holder



1

Screw the 0,50 m \varnothing 25 mm tubes into the half spheres.

2

Slide the two spheres on the 1 m tubes.

3

Slide the horizontal bar on the tubes,
*adjust it at the desired height
and gently tighten.*

4

Slide the two other spheres on the tubes.

5


Slide the second horizontal bar on the tubes,
*adjust it at the desired height
and gently tighten.*

6

Fix the two triade spheres.

7

Place the boards.

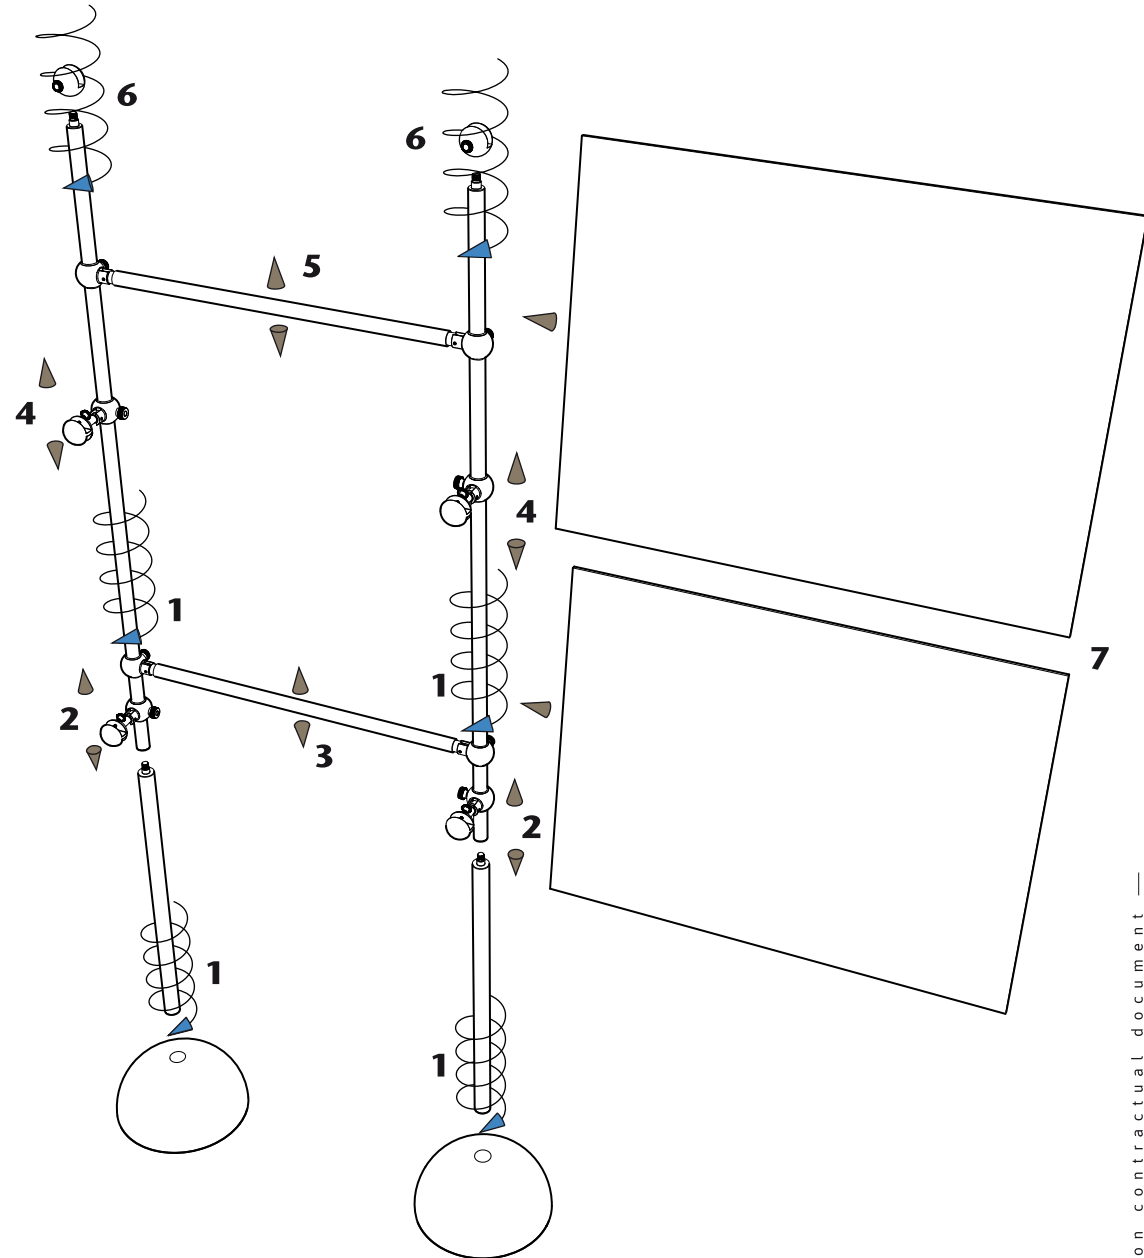

If you want the components to be locked,
use the threadlocker sold on www.e-spheria.com