

Screw the stabilizer element under the half sphere

with a flat screwdriver.

2

Screw a tube into the half sphere and a second tube into the first one.

3

Slide the horizontal bar at the desired height and gently tighten.

Slide the visual (not included) on the bar.


4

Fix the black sphere.



If you want the components to be locked, use the threadlocker sold on www.e-spheria.com



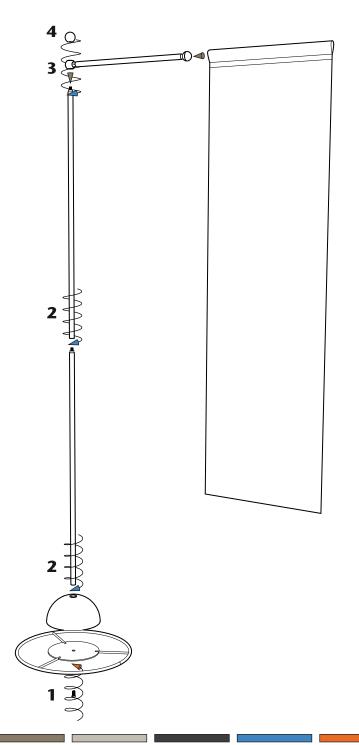

n contractual document —