

Screw the stabilizer element under the half sphere

with a flat screwdriver.

2

Screw a tube into the half sphere and a second tube into the first one.

3

Slide the ø20 mm tube 1 m into the sphere.

Fix the black spheres at the end of the tubes.

Screw the tube and the sphere on the 0,50 m tube.

4


Place the visuals.

Not provided.



If you want the components to be locked, use the threadlocker sold on www.e-spheria.com



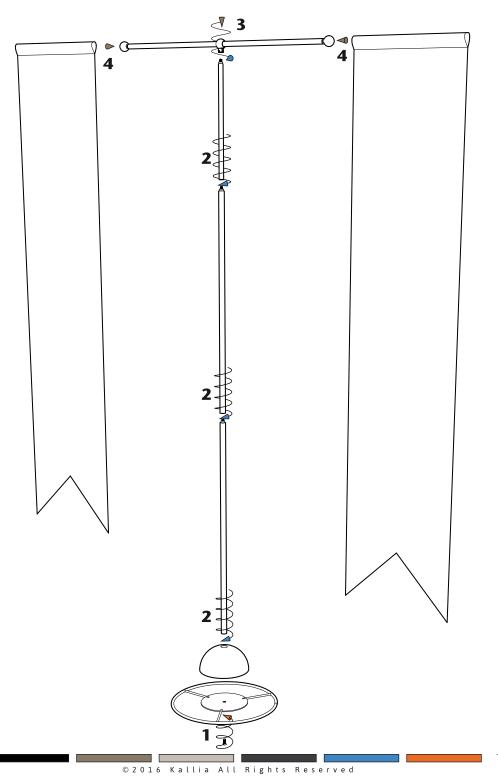

- - -