

# Assembly Instructions / a3 Information Block



**1**


Screw the tube into the half sphere.

**2**

Place the a3 sign frame on the T vertically or horizontally.

*Insert your document and adjust the sliding tube at the desired height.*

*Gently tighten.*

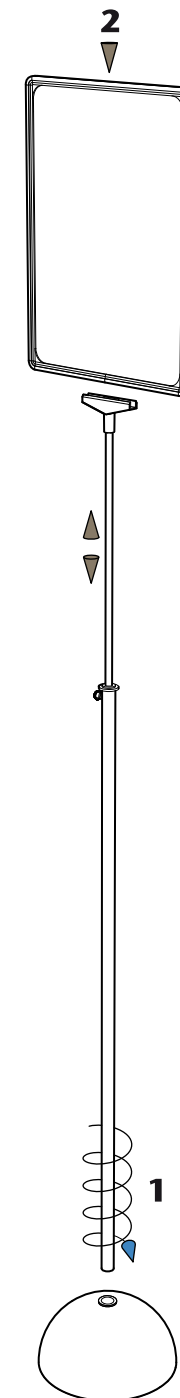

*If you want the components to be locked,  
use the threadlocker sold on [www.e-spheria.com](http://www.e-spheria.com)*

**S**pheria®